



# NanoBeam<sup>®</sup> ISO

Isolator Shield

Models: NBE-16-ISO, NBE-19-ISO

QUICK START GUIDE

## Isolator Shield Compatibility

Isolator Shield	Compatible NanoBeam® Models
NBE-16-ISO	NBE-M5-16, NBE-5AC-16
NBE-19-ISO	NBE-M5-19, NBE-5AC-19

## Package Contents



Isolator Shield




Isolator Shield Ring



Quick Start Guide

## Installation

1. Align the bubble level and port of the NanoBeam with the openings of the *Isolator Shield*, and then insert the NanoBeam into the *Isolator Shield*.

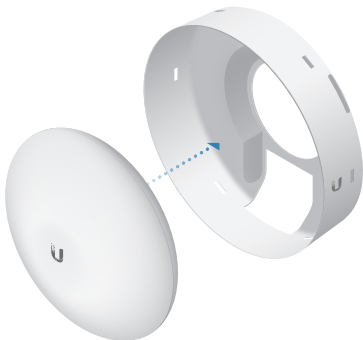

2. Align the tabs of the *Isolator Shield Ring* with the slots of the *Isolator Shield*. Insert the *Isolator Shield Ring* into the *Isolator Shield* until the tabs lock into the slots.



3. Insert the ball joint mount into the NanoBeam.



4. Insert the lock ring into the NanoBeam.



5. Turn the lock ring to secure the ball joint mount to the NanoBeam.



## Online Resources

Support [support.ubnt.com](http://support.ubnt.com)

Community [community.ubnt.com](http://community.ubnt.com)

Downloads [downloads.ubnt.com](http://downloads.ubnt.com)

©2016 Ubiquiti Networks, Inc. All rights reserved. Ubiquiti, Ubiquiti Networks, the Ubiquiti U logo, the Ubiquiti beam logo, and NanoBeam are trademarks or registered trademarks of Ubiquiti Networks, Inc. in the United States and in other countries. All other trademarks are the property of their respective owners.

JL020516



640-00233-01