

Installation manual for mechanical thermostat KTS-A10

Use

Thermostat KTS-A10 is primary assign for controlling of regulation heating parts in the distributor. Is also possible use it for regulation os signalization parts.

Security directions

- Thermostat should be instaled only by qualified technician, following of national and electrical regulations
- Instalation is not possible make in to the live circuit.
- Technical specifications (napětí, proud, teplota) written in the device can not be overloaded.

Installation directions

Set the demanded temperature in with you want bracing of contacts. Conect thermostat in to the electric circuit, follow the scheme in manual. After situate thermostat on the structural standart plinth DIN 35 follows EN50022. After this step is instalation coplete.

Temperature seting is possible make everytime after full thermostat instalation.

Technical parameters.

voltage rating	- 250V AC 50...60Hz
rated current	- 10A
temperature of working	- -20...+80°C
temperature limit	- 0...+62°C +/-6K
regulation angle	- 306°
temperatu growht	- 1K/min.

